

Laser 152.780 & 152.782

Create an ild file with the software.

Create a new file with the program notepad, the file should contain the following data:

- First the name of the Ilda file
- Secondly the speed for playing the ild file
- Last the how often the the file should be projected.(run)

The text should look like this, we used the ILD file with the name Test:

```
Test.ild,2,4
```

You can add several ild-files.

Put the underneath each other, for example:

```
Test.ild,2,4
```

```
Test2.ild,4,6
```

- Save the file with the extension .prg in the same folder as the ilda files.
- Now you can choose the folder and the prg-file with you laser
- You also can play the ild-file individually, only if they are in the prg-file